

KLOBER

3-in-1 Eaves Vent Pack

Fitting instructions



1. Position the Fascia Vents directly on top of the fascia board with the stop section firmly against the vertical edge of the fascia board.



2. Slot together lengths of Fascia Vents as required.



3. Fix the Fascia Vents onto the top of the fascia board through the nail holes using 50mm x 3.35mm corrosion resistant nails.



4. Fix subsequent units continuously along the eaves.




5. Roll out the Roll Out Rafter Tray over the rafters in the correct position to provide a clear ventilation channel above the roof insulation.




6. Fix the tray onto the rafters using corrosion resistant clout head nails or staples.




7. Leave a slight drap between each rafter.

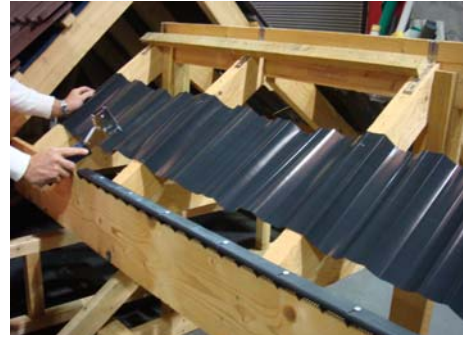


8. Continue along the length of the rafters.

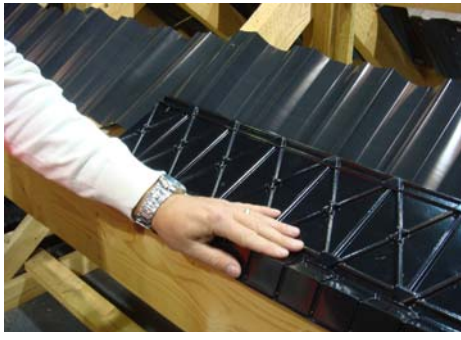

9. Place the Underlay Support Trays over the fascia board.

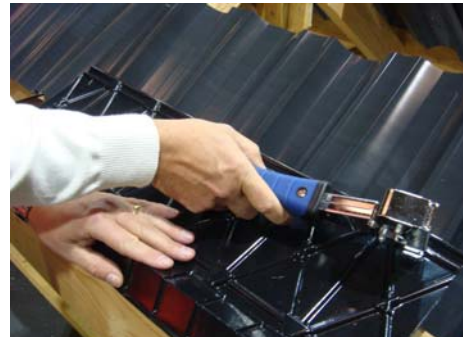

10. Then nail them directly into the rafters using corrosion resistant nails or staples.

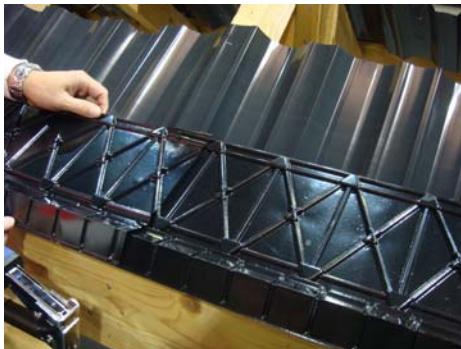

11. Adjoining lengths should be overlapped by a minimum of 100mm. Lay the roofing underlay onto the Underlay Support Tray, ensuring the bottom edge does not go over the line of the fascia board and into the gutters.

NB For low pitch pitched roofs two Roll-Out Rafter Trays may be joined together and, if using soffit ventilation, the bottom edge of the tray must be kept minimum 25mm from the back of the fascia board.